



WowWee MiP Robot Wheel Replacement

Replace the wheels of your WowWee MiP robot.

Written By: Daniel Burkholder



INTRODUCTION

Use this guide to replace the wheels of your WowWee MiP robot.

Step 1 — Wheel



- Use a metal spudger to carefully pry off the hubcap without marring the plastic wheel or hubcap.

i This plastic material is not replaceable. Any damage will be noticeable.

Step 2



- Remove the 12.0 mm Phillips #2 screw.

i Hold the wheel in place, or it will rotate as you attempt to remove the screw.

Step 3



- Pull the wheel off of the square axle.

⚠ Do not use excessive force while removing the wheel. Pulling too hard on the wheel can damage the axle.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 08:26:32 AM.